



# Antaira Technologies

## LNP-0500G-bt Series

5-Port Industrial Gigabit IEEE 802.3bt Unmanaged Ethernet Switch, w/4\*10/100/1000Tx (90W/Port) + 1\*10/100/1000Tx

## Quick Installation Guide

Version 1.0  
(May 2020)




Tel: 1-844-268-2472  
Fax: 1-714-671-9944  
www.antaira.com

## Package Check List

The package contains the following items:


- 1 – Quick installation guide
- 1 – LNP-0500G-bt(-T)
- 1 – Wall mounting bracket set with screws
- 1 – DC cable –18 AWG & DC jack 5.5 x 2.1mm
- 1 – RJ45 dust cover set

## Front Panel Layout

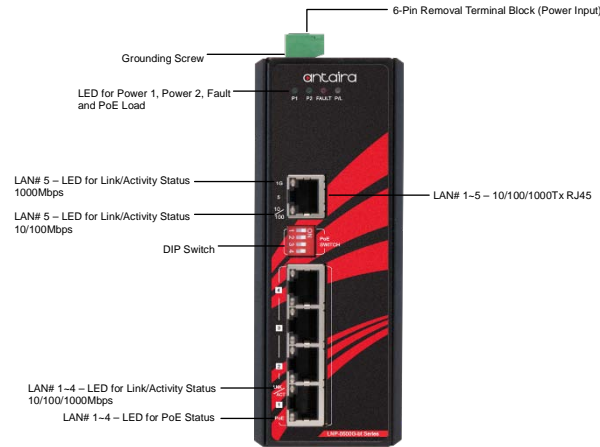

## Top Panel View

LNP-0500G-bt series top panel is equipped with one 6-pin removal terminal block connector for dual DC power inputs (48~55VDC).

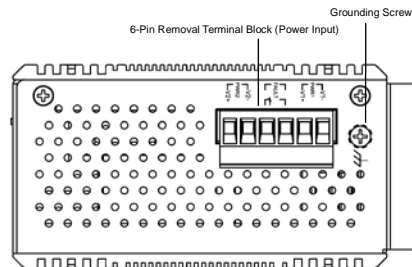

## Product Overview

### System Interface/Performance

- All RJ45 ports support the auto MDI/MDI-X function
- Embedded 4\*10/100/1000Tx RJ45 ports (90W/Port) and 1\*10/100/1000Tx RJ45 port
- Store-and-forward switching architecture
- 8K MAC Address Table
- Supports 10Kbytes jumbo frame
- 1Mbit memory buffer

## Power Input & Connection

- DC 48 to 55V redundant power, with a 6-pin removal terminal block
- Max. current: 3.9A
- Max. PoE output: 180W
- It is recommended to use a UL listed industrial power supply

## Operating Temperature

- Standard Operating Temperature model: -10°C to 65°C
- Extended Operating Temperature model: -40°C to 75°C

## Case/Installation


- IP30 Protection
- DIN-Rail and Wall Mount Design

## PoE DIP Switch

DIP Switch Number	ON	OFF
PoE DIP Switch 1	Enable Port 1 PoE Function	Disable Port 1 PoE Function
PoE DIP Switch 2	Enable Port 2 PoE Function	Disable Port 2 PoE Function
PoE DIP Switch 3	Enable Port 3 PoE Function	Disable Port 3 PoE Function
PoE DIP Switch 4	Enable Port 4 PoE Function	Disable Port 4 PoE Function

## LED Indicators

LED	Color	Description	
Power 1	Green	On	Power input 1 is active
		Off	Power input 1 is inactive
Power 2	Green	On	Power input 2 is active
		Off	Power input 2 is inactive
Fault	Red	On	Any of the listed trigger events occur, (will trigger relay) 1. Power 1 or Power 2 is inactive 2. Total PoE loading is > 100% PoE Budget 3. PoE over current (per port) 4. Cable short (per port) 5. One of the channels in Dual PD fail
		Off	No trigger events occur
PoE Load	Blue	Off	The actual PoE Consumption of all connected working PDs budget was ≤ 50%
		On	The actual PoE Consumption of all connected working PDs budget was 51 – 70%
		Red	The actual PoE Consumption of all connected working PDs budget was 71 – 90%
LAN Port 1-4 (Upper LED)	Green	Blinking (1 time/s)	The actual PoE Consumption of all connected working PDs budget was 91 – 100%
		On	Connected to network, 10/100/1000Mbps
		Off	Not connected to network
LAN Port 1-4 (Lower LED)	Green	On	IEEE 802.3bt connection (Single Signature PD Class 5-8 / Dual Signature PD Channel Class 1-5)
		Off	No powered-device attached or power supplying fails
	Amber	On	IEEE 802.3af/at connection (Single Signature PD Class 0-4)
		Off	No powered-device attached or power supplying fails
LAN Port 5	Green	On	Connected to network, 1000Mbps
		Blinking	Networking is active
		Off	Not connected to network

	On	Connected to network, 10/100Mbps
	Flashing	Networking is active
	Off	Not connected to network


## Quick Installation

### Ethernet Ports

#### RJ45 Ports (Auto MDI/MDIX)

All RJ45 ports are auto-sensing for 10Base-T, 100Base-TX, or 1000Base-T device connections. Please follow the wiring pin assignment table below for Ethernet port installation.

RJ45 Ethernet Port Pin Outs				
Pins	T568A Color	T568B Color	10Base-T, 100Base-TX	1000 Base-T(X)
Pin 1	white/green stripe	white/orange stripe	Rx+	TP0+
Pin 2	green solid	orange solid	Rx-	TP0-
Pin 3	white/orange stripe	white/green stripe	Tx+	TP1+
Pin 4	blue solid	blue solid	unused	TP2+
Pin 5	white/blue stripe	white/blue stripe	unused	TP2-
Pin 6	orange solid	green solid	Tx-	TP1-
Pin 7	white/brown stripe	white/brown stripe	unused	TP3+
Pin 8	brown solid	brown solid	unused	TP3-

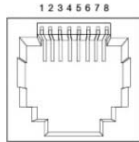

### Power Input Wiring

Please follow the steps below to insert the power wire:

1. Insert the positive and negative wires into the **PWR1 (V1+, V1-)** and **PWR2 (V2+, V2-)** contacts on the terminal block connector as shown below in *Figure 1*.
2. Tighten the wire-clamp screws to prevent the wires from loosening, as shown below in *Figure 2*.

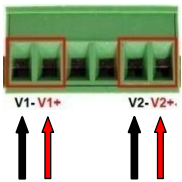


Figure 1



Figure 2

### Industrial Switch Mounting

#### DIN-Rail Mounting

The DIN-Rail bracket is pre-installed on the industrial Ethernet switch from the factory. Please refer to *Figure 3* for a DIN-Rail bracket installation reference.

Follow the steps below for installing the industrial switch on the DIN-Rail track:

1. Insert the top of the DIN-Rail on to the track as shown below in *Figure 4*.
2. Lightly pull down the bracket on to the rail as shown below in *Figure 5*.
3. Check if the bracket is mounted tightly on the rail.
4. To remove the industrial Ethernet switch from the rail, do the opposite from the steps above.



Figure 4

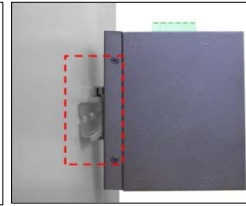


Figure 5

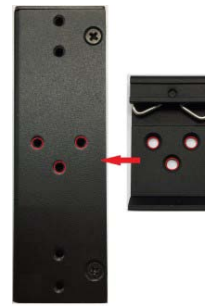


Figure 3

#### Wall Mounting

Follow the steps below to mount the industrial Ethernet switch using the wall mounting bracket as shown below in *Figure 6*.

1. Remove the DIN-Rail bracket from the industrial Ethernet switch by loosening the screws.
2. Place the wall mounting brackets on the top and bottom of the industrial Ethernet switch.
3. Use the screws to screw the wall mounting bracket on the industrial Ethernet switch.
4. Use the hook holes at the corners of the wall mounting bracket to hang the industrial Ethernet switch on the wall.
5. To remove the wall mount bracket, do the opposite from the steps above.



Figure 6

### Field Maintenance and Service

- If the device requires servicing of any kind, the user is required to disconnect and remove it from its mounting. The initial installation should be done in a way that makes this as convenient as possible.
- Voltage/power lines should be properly insulated as well as other cables. Be careful when handling them so as to not trip over.
- Do not under any circumstance insert foreign objects of any kind into the heat dissipation holes located in the different faces of the device. This may not only harm the internal layout, but might cause harm to user as well.
- Do not under any circumstance open the device for any

reason. Please contact your dealer for any repair needed or follow the instructions within the manual.

## Warranty Policy

### Warranty Conditions

Products supplied by Antaira Technologies are covered in this warranty for sub-standard performance or defective workmanship. The warranty is not, however, extended to goods damaged in the following circumstances:

- (a) Excessive forces or impacts
- (b) War or an Act of God: wind storm, fire, flood, electric shock, earthquake
- (c) Use of unqualified power supply, connectors, or unauthorized parts/kits
- (d) Replacement with unauthorized parts

### RMA and Shipping Costs Reimbursement

Customers shall always obtain an authorized "RMA" number from Antaira before shipping the goods for repair or replacement.

- Within the warranty period (based on the invoice date), all parts and labor are free of charge to the customers.
- Customers are responsible for the cost of parts and labor, if the products are out of warranty.
- For RMA service, customers are responsible for the shipping expense for shipping the RMA unit(s) to Antaira. Antaira is responsible for the shipping expense via a ground service for the return repair/replace unit(s) back to customers.

### Limited Liability

Antaira would not be held responsible for any consequential losses from using Antaira's product.

### Warranty Period

5-Year Warranty

### Antaira's Customer Service and Support

- Antaira's Technical Service & Support Centers:
  - + 844-268-2472 (Antaira US Headquarter)
  - + 48-22-862-88-81 (Antaira Europe Office)
  - + 886-2-2218-9733 (Antaira Asia Office)
- Antaira's Web Sites & Repair/Support Emails:
  - [www.antaira.com](http://www.antaira.com) / [support@antaira.com](mailto:support@antaira.com)
  - [www.antaira.eu](http://www.antaira.eu) / [info@antaira.eu](mailto:info@antaira.eu)
  - [www.antaira.com.tw](http://www.antaira.com.tw) / [info@antaira.com.tw](mailto:info@antaira.com.tw)

\*Any changes will be announced on the Antaira website.